

1. 'A' shows a mitre cut Cladseal. Refer to Cladseal fitting instructions on how best to cut.



2. Cut both mitred Cladseals to length of shower tray and offer up to the corner, ensure a nice snug fit (do not glue). 'B' & 'C'




3. Rest both Cladseal lengths on top of the shower tray ready for measurement 'D'




4. Slide the chrome corner profile down over the Cladseal and position in place ready to mark. 'D' & 'E'



5. Draw a pencil line down both upstands of the Cladseal and horizontal into the corner as shown in 'E' & 'F'. With a fine tooth saw cut down the vertical line 'G' then along line 'H'.

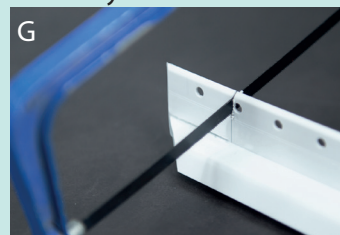

6. The cut and rebated Cladseal strips are now ready to accept the chrome corner trim. 'J'

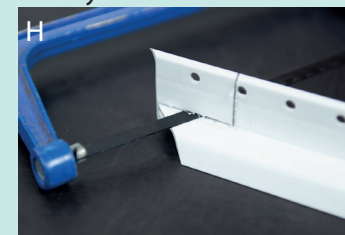

7. You can now affix your Cladseal to the shower tray (refer to Cladseal fitting instructions).



8. Apply a bead of adhesive to the corner walls of your shower enclosure both sides top to bottom. Slide the chrome corner into position 'K' pushing tight into the corner, plumb with a spirit level.



9. Apply a grid of adhesive to the wall, see 'L' ready for the installation of the wall panel.



10. Using a sealant gun apply a thin bead of waterproof sealant inside the rebate of the chrome trim. 'M'



11. Apply a thin bead of waterproof sealant along the top of the Cladseal. 'N'



12. You are now ready to fix the 1st wall panel. Offer up and slide into position, making sure the panel is pushed tight into the rebate of the chrome corner profile. Some sealant may be pushed out but this can easily be wiped clean with a damp soapy cloth. 'P'



13. 1st wall panel in position. 'Q' Repeat the procedure for the left hand panel. 'R'